


BRIDGESCOUT® BASIC NOTIFICATIONS

BRIDGESCOUT® BASIC IN STANDBY MODUS



BRIDGESCOUT® BASIC MAKES YOU AWARE OF AN APPROACHING OBJECT AT A DISTANCE OF 500 METERS FROM AN OBJECT

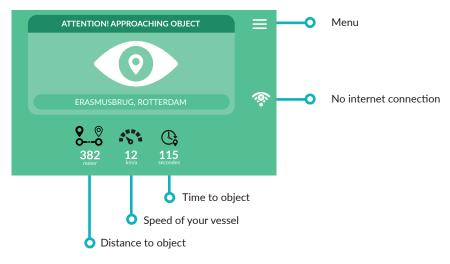

SENSORMARITIME

ERROR MESSAGES

Please note that in case of an error Bridgescout® Basic is not functioning.



Check the wiring and the GPS antenna for damage and contact Sensor Maritime.




Wait until Bridgescout® regains a GPS position. If it takes more than 10 minutes, with the exception of locations where a poor reception is likely, please contact Sensor Maritime.



Please contact Sensor Maritime. Please note that your additional products, like wheelhouse height sensor and/or antenna mast detection sensor, will not function.

MENU

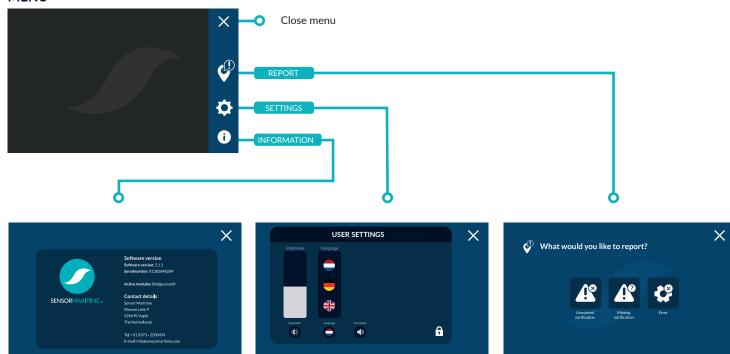

SENSORMARITIME





☑ info@sensormaritime.com⊕ sensormaritime.com

